


Parts List

Qty	Reference	Description
1	A	Base
1	B	Reel Support Frame
4	C	Reel Axle Assembly #1
1	D	Reel Axle Assembly #2
1	E	Wire Guide
1	F	Adjustable Brace
1	G	Handle
2	H	Rigid Caster
2	I	Swivel Locking Caster
1	J	Caster Hardware Kit (bag)
1	K	Hardware Kit (bag)

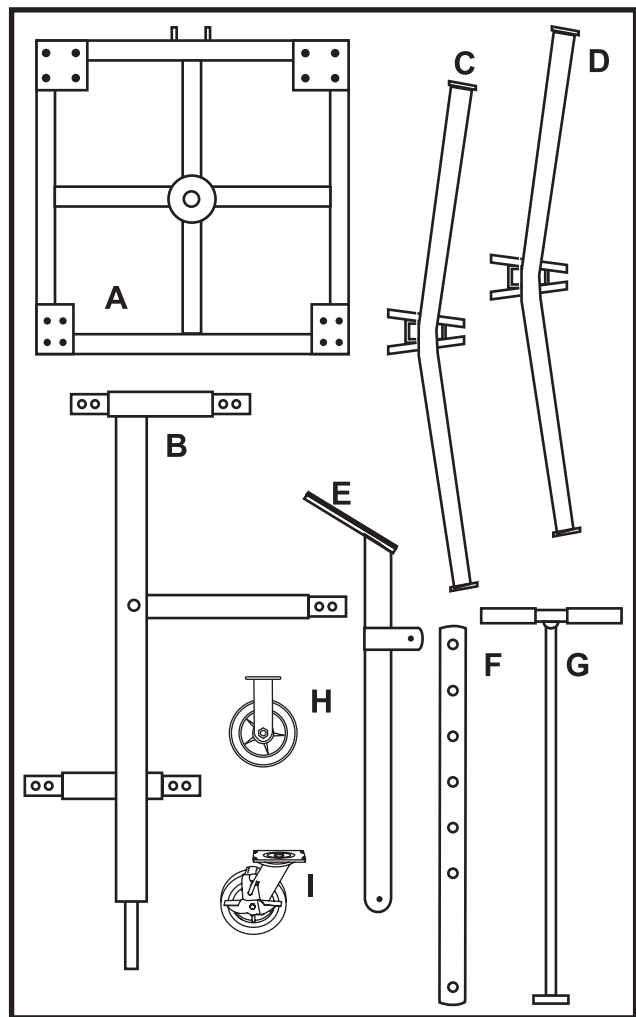

Safety Rules

This product was designed for certain applications only. Elecor strongly recommends that this product not be modified and/or used for any purpose other than that for which it was designed.



CAUTION

Use care when lifting the Ten Reel Wire Dispenser. Unload spools first. To prevent tip over, load and unload spools evenly side to side. Do not use as a step or ladder.

Capacity

Holds up to ten 2,500' spools up to 18" in diameter.

Tools Required for Assembly

9/16-inch wrench or socket

One Year Limited Warranty

Elecor will repair or replace, at its expense and at its option, any Elecor product or accessory which in normal use has proven to be defective in workmanship or material, provided that the customer notifies his supplying distributor of the alleged defect within one year from the date of delivery. If requested by Elecor customer must provide reasonable opportunity to verify the defect by inspection. Elecor will not be responsible for any asserted defect which has resulted from misuse, abuse, repair or alteration. Under no circumstances will Elecor be liable for incidental or consequential damages resulting from defective products. This warranty is Elecor's sole warranty and sets forth the customer's exclusive remedy with respect to defective products; all other warranties, expressed or implied, whether of merchantability, fitness for purpose, or otherwise, are expressly disclaimed by Elecor.

Parts Or Warranty Assistance

All Elecor products and accessories are manufactured to high quality standards. To obtain additional information regarding your Elecor product or to obtain parts, accessories or warranty assistance, please contact customer service at 1-888-466-8600 x 106.

ELECOR LLC

13 Wood Street
P.O. Box 26125
West Haven, CT 06516
Phone: 203-937-3029
Fax: 203-937-3028

For Parts, Accessories, or
Warranty Assistance, Please
Call 1-888-466-8600 x 106



Manufacturers of Quality
Electrical Products

MH8420 Ten Reel Wire Dispenser






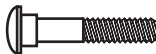






Instruction Manual

Patent Pending

Hardware

The hardware for assembling the Ten Reel Wire Dispenser is enclosed in the MH8420-K Hardware Kit (bag). The Hardware for the casters is in the MH8420-J Hardware Kit (bag). The kits contains the items shown at right and below.

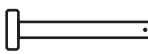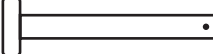CASTER HARDWARE KIT			
Reference		Description	Qty
1		3/8 x 1" HEX HEAD BOLT	16
2		3/8 x 1" FLAT WASHER	16
3		3/8" LOCK WASHER	16

HARDWARE KIT			
4		3/8-16 x 1-1/2" CARRIAGE BOLT	10
5		3/8 x 1" FLAT WASHER	10
6		3/8-16 NYLON-INSERT LOCK NUT	10
7		1-3/4" CLEVIS PIN	2
8		4" CLEVIS PIN	1
9		#3 x 1-1/2" COTTER PIN	3
10		#5 x 1-1/2" COTTER PIN	1




Assembly Instructions

1 Attach casters (H) and (I) to Base (A). With base upside down on flat surface, attach Rigid Casters (H) to the rear of Base (A) using the 3/8 x 16" Hex Head Bolt (1), 3/8" Lockwasher (3) and 3/8 x 1" Flat Washer (2) as shown in Figure 1. Repeat the process for the Swivel Locking Casters (I) on the front of Base (A).


Note: After assembly, turn right side up and lock front casters. Proceed to Step 2.

2 Insert Reel Support Frame (B) into center of Base (A). Using the #5 x 1-1/2" Cotter Pin (10), secure shaft in place as shown in Figure 2.


3 Attach Reel Axle Assembly #1 (C) to Reel Support Frame (B) using the 3/8 x 16 x 1-1/2" Carriage Bolt (4), 3/8 x 1" Flat Washer (5), and 3/8 x 16 Nylon-Insert Locknut (6) as shown in Figure 3.

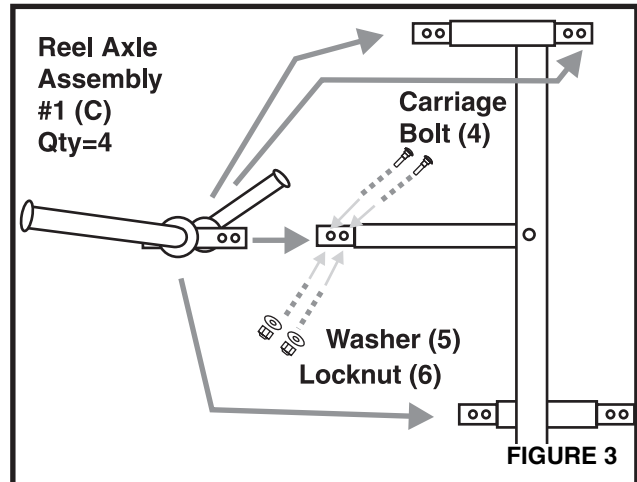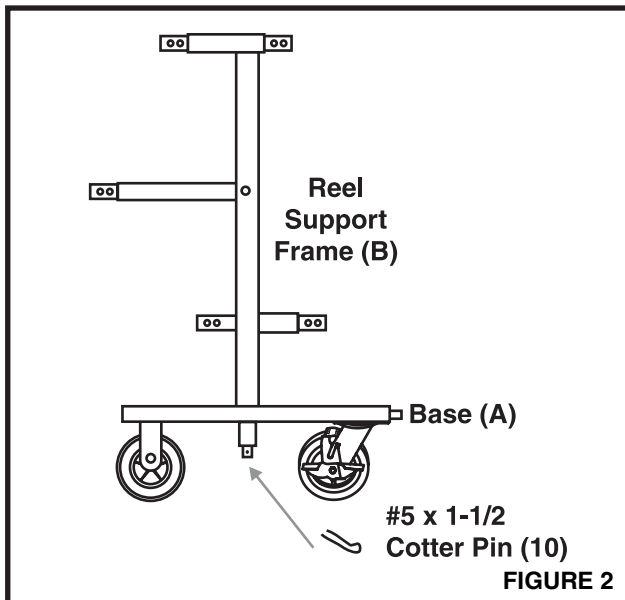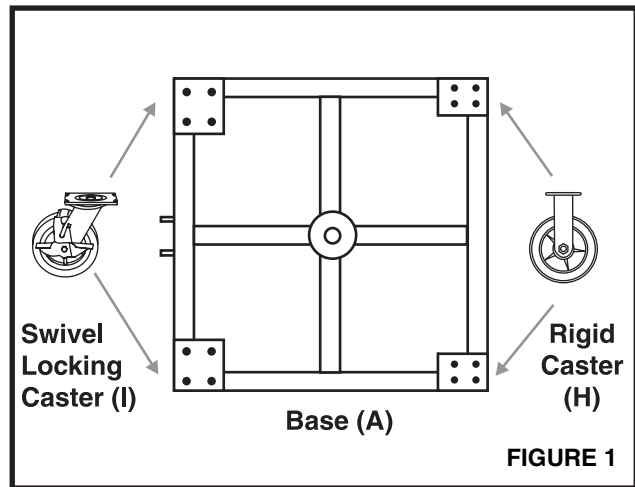

4 Attach Reel Axle Assembly #2 (D) to Reel Support Frame (B) using the 3/8 x 16x1-1/2" Carriage Bolt (4), 3/8 x 1" Flat Washer (5), and 3/8 x 16 Nylon-Insert Locknut (6) as shown in Figure 4.

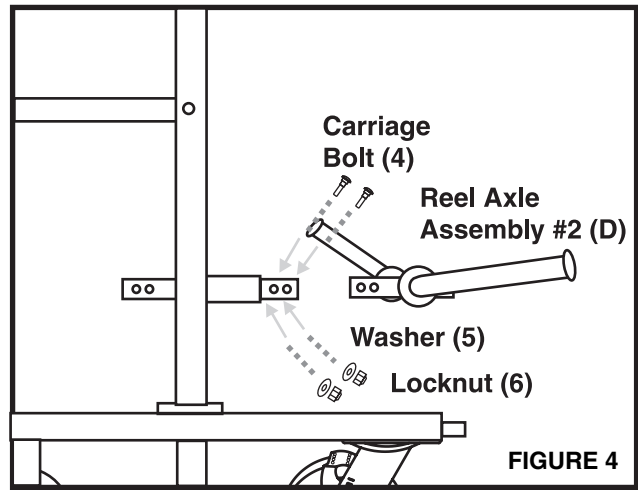


5 Attach Wire Guide (E) to Reel Axle Assembly #2(D). Using the 1-3/4" Clevis Pin (7) and #3 x 1-1/2" Cotter Pin (9) as shown in Figure 5.

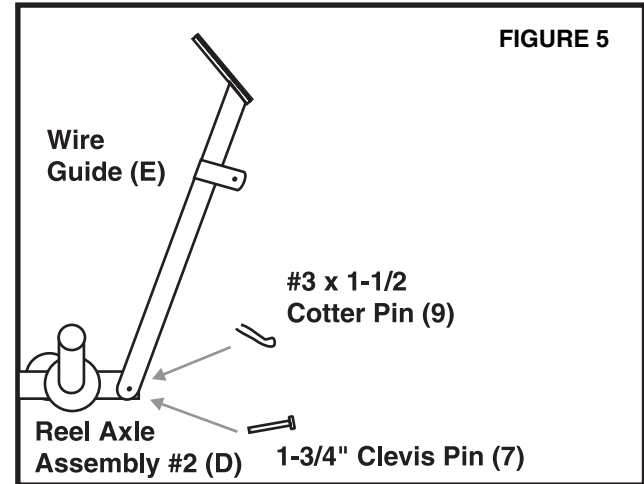

6 Connect Adjustable Brace (F) to Wire Guide (E) using the 1-3/4" Clevis Pin (7) and #3 x 1-1/2" Cotter Pin (9) as shown in Figure 6.

Note: Slide Adjustable Brace (F) through bracket on Reel Support Frame (B) and secure using Pin and Lanyard Assembly.

7 Attach Handle (G) to Base (A) using the 4" Clevis Pin (8) and #3 x 1-1/2" Cotter Pin (9) as shown in Figure 7.

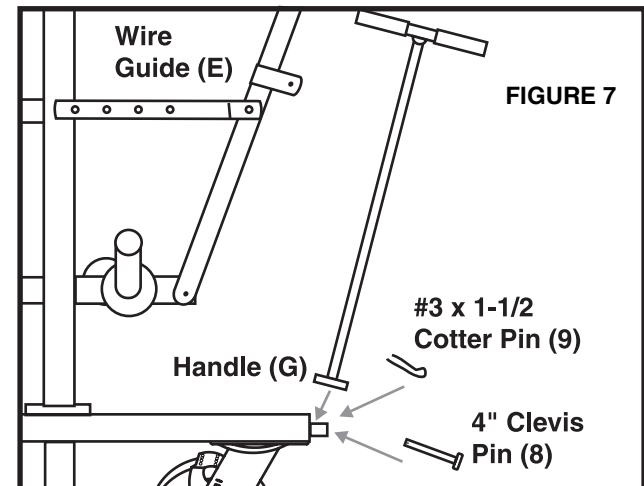

8 Secure Handle (G) to Wire Guide (E) using Pin and Lanyard Assembly as shown in Figure 8.

